 


homesmart®

USER MANUAL

Household Vacuum Cleaner

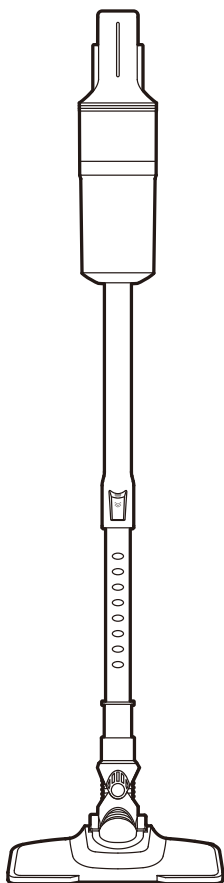

Model: JYF2

Safety Precautions

- **This device may be used by children over 8 years of age and persons with limited physical, sensory or mental abilities, or lacking experience and knowledge, provided they receive supervision or instructions regarding safe use. device safety and understand the risks it presents. It is forbidden to let children play with the device. It is prohibited to allow children to clean and maintain the appliance without supervision.**
- **Keep the device and its cable out of the reach of children under 8 years old.**
- **Do not let children play with the packing materials.**
- Do not repair the device yourself. Instead, contact a qualified technician. To avoid any endangerment, have the defective cable replaced only by an equivalent cable and only by the manufacturer, its after-sales service or any person of similar qualification.
- Always disconnect the device from the power supply if left unattended and before assembly, disassembly or cleaning.
- Switch off the device and disconnect it from the power supply before changing accessories or approaching parts that are mobile during operation.
- This appliance is not designed to be with an external timer or by a separate remote control system.
- The vacuum cleaner is an electrical device, so it should be used under normal conditions, it should not be used without supervision.
- The vacuum cleaner can cause fire and personal injury if it picks up the following objects

- Heat source: Charcoal fire, cigarette butts
 - Large pointed fragment: piece of broken glass
 - Liquid: hazardous article (solvent, rodent), acidic agent, cleaner and water.
 - Flammable and explosive products: petrol and alcoholic products
 - Construction waste and cement
- Switch off the power when cleaning, maintaining and not using the appliance for a certain period of time.
 - Do not immerse the body of the appliance in water.
 - Children should not play or use the vacuum cleaner in the event of an accident.
 - Do not operate the vacuum cleaner under such circumstances:
 - Fall with apparent damage or out of order
 - Power cord damaged
 - Do not operate for a long time when the suction inlet was blocked, in case the motor is damaged or the machine deformed.

 
Product parts name and diagram

- 1.Crevise tool 2.Vacuum cleaner and power cord 3.Floor brush
4.Plastic tubes 5.Wall bracket


1



2

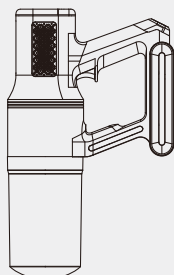

3

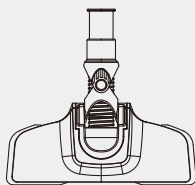 

4



5

 


Use


Attention: the suction inlet should be kept clear, and no foreign matter should block it, otherwise the motor will overheat and cause an accident.

Switching on/off

Plug the power cord into the socket for power connection.

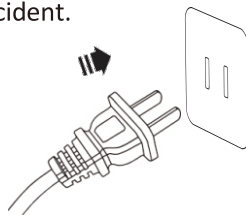


Press the power switch button, the machine starts to work, and press the switch button again when it is necessary to stop working.

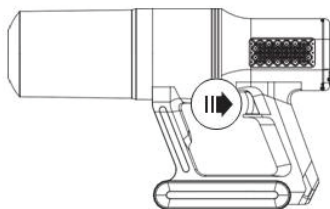


Installation


Insert the crevice tool into the front of the dust cup of the vacuum cleaner as shown in the figure. After inserting the flat suction into the appropriate depth, it can be fixed by friction.

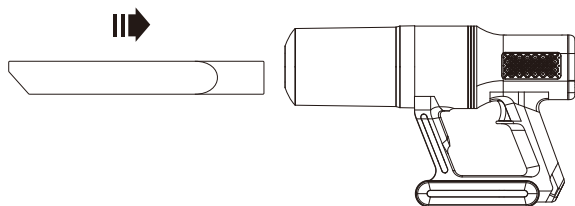

Insert the tubes in the front of the dust cup as shown in the figure

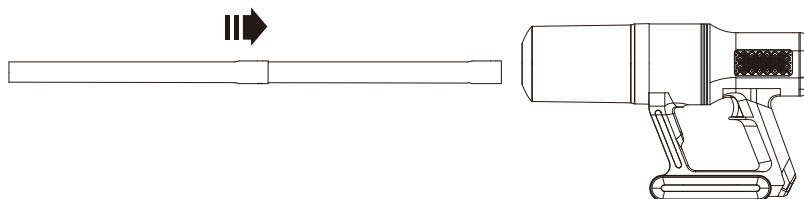

Then you can insert floor brush or crevice tool.

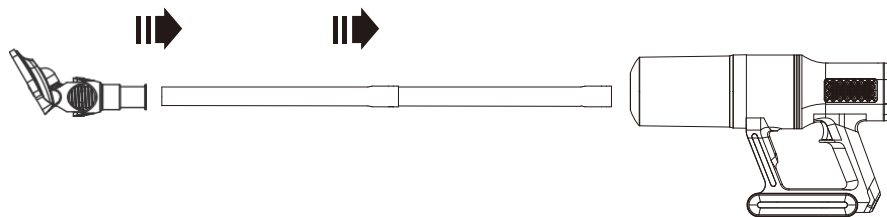


ATTENTION

Regularly clean the filter components, as the mites present in the filter batting may not be killed and will continue to reproduce. To avoid secondary pollution, the filter components should be cleaned or replaced with new components after cleaning.


1. Switch off the machine.
2. Hold the other hand on the device and remove the collector, as shown in the figure.
3. Hold manifold and press arrow for filter assembly.
4. In order to ensure the service life and filtering effect of the product. If the dust accumulates too much after a certain period of use, it is necessary to throw the dust and waste into the collector, and wash the filter and the filter of the collector.

Collector Reset

- Place the filter into the dust cup, align the positioning shape of the air in the filter with the positioning shape of the air inlet of the dust cup, and then push the filter into the dust cup. When the filter assembly is flat and cannot be moved down, the components are in place.

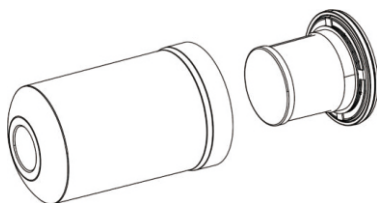


- Hold the machine, facing away from the direction of removing the dust cup components, align the dust cup release reference point with the machine reference point, push the dust cup forward. inside and parallel to the bottom, then rotate the dust cup clockwise all the way.

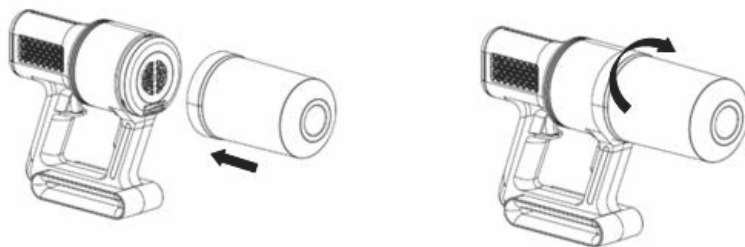

Using the Wall Mount

After fixing the bracket to the wall with the expansion screw, the device can be hung on the wall in the direction of the arrow. When removing it, hold the device by hand and remove it in the opposite direction of the arrow.

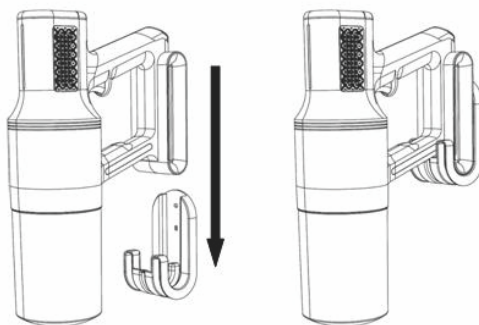

Daily storage

1. All routine care and maintenance should be performed after using the vacuum cleaner.
2. Regularly clean the garbage in the trash can to avoid vacuum cleaner breakdown.
3. The surface of the vacuum cleaner cannot be cleaned with gasoline or oil, but with a soft cloth or neutral detergent.
4. The cleaning cloth must be dry, and water must not seep into the electrical components of the vacuum cleaner.
5. Keep the storage area dry.
6. Do not stack heavy objects on top of the machine.

Repair

In case of the following general problems, the user can carry out the investigation himself; if they can't solve the problem, they should contact customer service personnel in time Attention: Please turn off the switch immediately when you encounter the following problems.

Avoid damaging the machine or causing other injuries.

Failure phenomenon	Cause of failure	Resolution
Unable to turn on	The vacuum switch is not on	Hit the switch again
Produce abnormal sound	The dust is full or the air duct is clogged	Take out the dust box and clean up any trash or blockages
Reduced inhalation ability	The dust is full or the filter is too dirty	Clean the dust in the dust bucket and clean the filter
Dust blown during use	The filter in the dust bucket is damaged	Immediately discontinue use and replace with a new filter
	Forgetting to install the filter	Stop use immediately and install the filter in place

Information technique

Power	400W
Voltage	220-240V~
Dust capacity	0.65L
Vacuum suction	≥ 13kPa
Noise	≤ 78dB
Cord length	4m

Distributed by:



IDEAL WORLD

PO Box 443, Feltham TW13 9DU
Email: customercare@idealworld.tv
Tel : 0800 151 2345
Web. www.idealworld.tv

Distributed by:



SHOP TJC

PO Box 443, Feltham, TW13 9DU
Email: contact@tjc.co.uk
Tel: 0800 260 6666
Web: www.tjc.co.uk

